YoigHänder

BEDIENUNGSANLEITUNG



Anschluss. Für eine schnelle und scharfe Fokussierung drehen Sie den Entfernungseinstellring, bis im Sucher das Doppelbild in der Mitte zu einem Einzelbild wird.

Herzlichen Glückwunsch zu Ihrer Wahl der neuen BESSA Kamera! Hierbei handelt es sich um eine Messsucherkamera mit M-Bajonett

VoigHänder Germany

Diese Kamera funktioniert rein mechanisch und benötigt nur für die Belichtungsmessung Batterien.

2

-(22)

-(24)

(4) Auslöseknopf (5) Filmtransporthebel

Objektiventriegelung

Verschlusszeitfenster

(1) Verschlusszeitenindex

Beschreibung der Teile

Bildzähler


Befestigung des Trageriemens

Befestigen Sie den Trageriemen an der Kamera, wie dies auf der Abbildung zu sehen

5

Verschlusszeit/ ISO/ Filmempfindlichkeitseinstellung

- Trageriemenöse
- Steckschuh für Zubehör oder Blitz (10) Bildfeldwähler
- (11) Filmrückspulspindel (12) Filmrückspulkurbel (13) Filmrückspulknopf
- (14) Rückwand Verschlusshebel (15) Fenster für Belichtungsmesser (16) Eingeblendeter Sucherrahmen (17) Sucherfenster
- (18) M-Bajonett

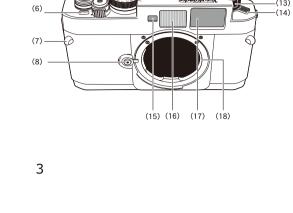

Stellen Sie sicher, dass sich

das Ende des Riemens auf der

Innenseite befindet.

-(11) -(12)

Objektiv mit M-Bajonett 1. Zum Anbringen des Objektives setzen Sie es so ins Kamerabajonett, dass die rote Markierung am Objektivtubus an der roten Markierung des Kameragehäuses liegt. Drehen Sie dann das Objektiv im Uhrzeigersinn, bis es

Anbringen und Abnehmen des Objektives

(19) Synchrokontakt (20) Sucherrahmen

(22) Stativgewinde

(25) Rückspulgabel (26) Filmspulenfach (27) Filmandruckplatte (28) Filmspulensichtfenster (29) Kamerarückseite (30) Winder-Kupplung

(23) Batteriefachdeckel

(31) Filmrückspulknopf (32) Filmaufnahmerolle

(33) Filmzahnrolle

(24) Filmführungsschienen

(21) Sucher

- 2. Um das Objektiv vom Gehäuse abzunehmen, drehen Sie das Objektiv bei gedrückt gehaltener Objektiventriegelung (8) gegen den Uhrzeigersinn, bis sich Objektiv- und Kamerabajonett voneinander gelöst haben. Heben Sie dann das Objektiv aus der Fassung ohne zu verkanten.
- Objektive mit M-39 Schraubgewinde Setzen Sie den als Zubehör erhältlichen M-Bajonett-Adapterring ins Kamerabajonett ein, wie es in der mitgelieferten Anleitung des Adapterrings beschrieben ist. *Jede der drei Größsen des M-Bajonett-Adapterrings kann hier benutzt werden. 1. Schrauben Sie das Objektivgewinde durch Drehen des Objektiv im

Sie das Objektiv fest, aber nicht mit Gewalt, in das Kameragehäuse ein.

2. Um das Objektiv wieder abzunehmen, schrauben Sie es gegen den Uhrzeigersinn heraus. 6

1. Um die Kamerarückseite (29) zu öffnen, entriegeln

2. Setzten Sie den Film in die Filmspulenkammer (26)

Filmkassette nach unten zeigt. Tätigen Sie diesen

Vorgang nicht bei direkter Sonneneinstrahlung.

3. Heben Sie den Filmrückspulhebel an. Drehen Sie den

Hebel vorsichtig, während Sie in sanft nach unten drücken, bis der Film in der Rückspulgabel (25)

4. Stellen Sie sicher, dass die Perforation des Films mit den Filmzahnrollen (33) übereinstimmt, und der Film an den Filmführungsschienen (32) entlang gleitet, indem Sie den Filmtransporthebel (5) betätigen, um

den Film nach vorne zu bewegen.

ein, so dass das hervorstehende Ende der

Kamerarückwand aufspringt. Wenn die


Sie den Rückwandverschlusshebel (14) und drücken

gleichzeitig den Filmrückspulknopf (13) hoch bis die

Kamerarückwand geöffnet ist, springt der Bildzähler

Einlegen des Films

(6) automatisch auf "S".

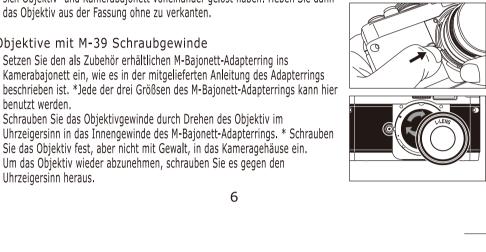

0000000000

3. Legen Sie die Knopfzellen nacheinander jeweils mit der mit "+" gekennzeichneten Seite nach unten ins Batteriefach ein.

Sollten im Sucher keine LED's leuchten (oder

1. Sie benötigen zwei Alkalimangan (Typ LR44) oder

2. Drehen Sie den Batteriefachdeckel (23) mit Hilfe einer

Münze oder einem ähnlichen in den Schlitz passenden Gegenstand gegen den Uhrzeigersinn, bis er sich löst.

zwei Silberoxid-Knopfzellen (Typ SR44)

Einlegen der Batterien

4. Setzen Sie den Batteriefachdeckel wieder auf und drehen Sie ihn mit der Münze o. ä. im Uhrzeigersinn, bis er fest geschlossen ist. Überprüfen der Batterie



Film richtig fortbewegt.


transportiert wurde.

- 5. Schließen Sie vorsichtig die Rückseite und drücken Sie diese, bis sie einrastet. 6. Spulen Sie den Film einige Bilder nach vorne, und drücken Sie jedes mal den Auslöser, bis der Bildzähler "1" anzeigt. Der Filmrückspulschacht dreht sich bei

7. Wenn Sie den Film vorbewegen, sollten Sie den

der Film vollständig bis zum nächsten Bild

Filmvorlaufhebel langsam und sicher bewegen, bis

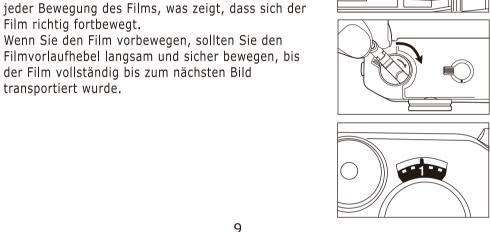

1. Die Filmempfindlichkeit ist auf der Außenseite der Filmschachtel oder der Gebrauchsanweisung des Films ersichtlich. 2. Einstellung der Filmempfindlichkeit: Bewegen Sie den

Ring auf den entsprechenden

im Sucher angezeigt.

Filmempfindlichkeitseinstellungen

Filmempfindlichkeitswert (ISO) zeigt, der im Filmempfindlichkeitsfenster (2) ersichtlich ist. Anmerkung: Vergewissern Sie sich, das die Filmempfindlichkeitseinstellung exakt eingerastet ist,

Filmempfindlichkeitseinstellring (2) nach oben und

drehen Sie Ihn, bis die Pfeilanzeige auf dem inneren

10

Sie den Ring in Richtung des kleineren Wertes.


5. Der Auslöser kann nun gedrückt werden.

Auswahl der Brennweite

35mn

R₃M

und zwar gemäß des Sehfelds des verwendeten Objektivs.

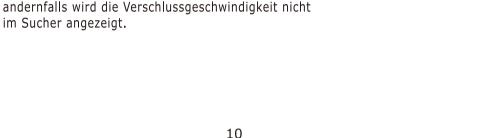

1. Drehen Sie den Belichtungseinstellring (2) so, das die weiße Linie mit dem Verschlusszeitenwert abgestimmt ist. Vergewissern Sie sich das der Wert einrastet.

2. Um bei hellerem Licht, sich schnell

Belichtungseinstellung

Belichtungseinstellung

folgender Maßen an:

Wert anzeigt.

Die Sucher LED-Anzeige zeigt Überbelichtung,

(Verschlusszeiten Priorität)

korrekte Belichtung und Unterbelichtung

bewegenden Motiven, oder "schnellem" Film einen genauen Belichtungswert festzustellen ist eine kürzere Verschlußzeit erforderlich. 3. Hier finden Sie eine Liste von Situationen und deren vorgeschlagenen Verschlusszeiten

(ausgehend von einem ISO 100/21 Film):



Überbelichtung bei über 2EV Überbelichtung bei 2EV

Überbelichtung bei 1.5 EV Überbelichtung bei 1 EV Überbelichtung bei 0.5 EV

Korrekte Belichtung Unterbelichtung bei 0.5EV Unterbelichtung bei 1 EV

Unterbelichtung bei 1.5 EV Unterbelichtung bei 2 EV Unterbelichtung bei über 2 EV

+2 leuchtet O blinkt ··· +2 leuchtet O blinkt ···

+1.5 leuchtet O blinkt ··· +1 leuchtet O blinkt ···· +0.5 leuchtet O blinkt ···

O leuchtet O blinkt

-1 leuchtet O blinkt

F Wert F2 - F4 F4 - F8 F8 - F11

-1.5 leuchtet O blinkt ···
-2 leuchtet O blinkt ···
-2 leuchtet O blinkt ····

12

Drehen Sie den Hebel (10) auf die gewünschte Brennweite und das unten gezeigte

Bild erscheint im Sucher. Das Bild zeigt den zu fokussierenden Bereich, wenn das

Objektiv angebracht ist. Darüber hinaus wird die Parallaxe automatisch korrigiert,

4. Um die Belichtung zu messen, drücken Sie den Auslöser (4) und drehen Sie den

Blendenring bis die LED Anzeige eine korrekte Belichtung anzeigt. Wenn die LED

Anzeige eine Überbelichtung anzeigt, drehen Sie den Blendenring in Richtung des

größeren Wertes. Sollte die LED Anzeige eine Unterbelichtung anzeigen, drehen

4. Zur Überprufüng der Belichtung, den Auslöseknopf (4) leicht drücken und die Verschlusszeitwählscheibe drehen, bis die Markierung aufleuchtet. Wenn eine Überbelichtung angezeigt wird, drehen Sie die Verschlusszeitenwählscheibe in Richtung der höheren Verschlusszeit. Wenn eine Unterbelichtung angezeigt wird, drehen Sie die Wählscheibe in Richtung des kleinere Wertes.

Belichtungseinstellung (Blenden-Priorität)

1. Drehen Sie den Blendenring bis der Index am Objektivtubus den gewünschten

Der geeignete Blendenwert hängt von der Helligkeit des Objekts, der

gewünschten Tiefenschärfe oder der Filmempfindlichkeit ab. Typische Einstellungen der Blende für einen Film ISO 100/21 sind unten angegeben.

Bedingungen Im Innenraum bei normalen Bedingungen Im Freien an einem bewölkten Tag

Im Freien an einem schönen Tag Am Meer im Sommer

3. Für jede Einstufung der Verschlusszeit sind Klickpunkte an der

Filmempfindlichkeitswählscheibe vorhanden.

11

- Anmerkung: Außerhalb des Belichtungsmessbereichs Ihrer Kamera (EV1 bis EV19) funktioniert die Belichtungsmessfunktion nicht korrekt und die LED-Anzeige kann bei inkorrekter Belichtung aufleuchten. 13

Bi**l**dausschnitt unscharf

15

14



16

Auge durch die Mitte des Suchers blicken.

zurückgespult werden.

diesen in Pfeilrichtung.

wieder in die Grundposition.

Blitzfotografie

Fokussierung 1

Drehen Sie den Ring zur

Fokussierung 2

verwendet werden.

Das genaue Fokussieren erfolgt mit dem im

Sucher erscheinenden "Doppelbild".

Entfernungseinstellung so, dass es zu einem deckungsgleichen Bild wird.

Für die genaue Fokussierung von architektonischen oder technischen Objekten mit vertikalen Linien, sollte die "Split image" Fokussierungsoption

Um dies zu bewerkstelligen, sollte die

Linse so eingestellt werden, dass die Linien durchlaufend erscheinen. * Stellen Sie beim Fokussieren sicher, das Sie mit Ihrem

Zurückspulen des Films 1. Wenn der Film voll ist und der Vorlaufhebel nicht mehr leichtgängig funktioniert, sollten Sie die Bildanzeige (6) überprüfen. Wenn der Bildzähler zeigt, dass alle Bilder des verwendeten Films belichtet worden sind, muss der Film

kann die Filmkassette entnommen werden.

Sie gleichzeitig den Filmrückspulknopf (13) hoch bis die Kamerarückwand aufspringt. Entnehmen Sie dann den Film. 6. Tätigen Sie diesen Vorgang nicht bei direkter Sonneneinstrahlung. Hinweis: Wenn der Film während des Filmvorlaufs das Ende erreicht, blockiert der Filmvorlaufhebel. Spulen Sie die gesamte Rolle zurück. Bringen Sie den Filmvorlaufhebel

2. Drücken Sie die Filmspultaste (31) auf dem Kameraboden. 3. Falten Sie den Filmrückspulhebel (11) heraus und drehen Sie

4. Sobald der Druck nachlässt ist der Film vollständig in seiner Rolle aufgewickelt. Heben Sie den Filmrückspulschacht an und ziehen Sie Ihn an, um die Kamerarückwand zu öffnen. Nun

5. Entriegeln Sie den Rückwandverschlusshebel (14) und drücken



1. Setzen Sie Ihr Blitzgerat auf den Zubehörschuh (9).

3. Stellen Sie den entsprechenden Blendenwert mittels

der Leitnummer Ihres Blitzes ein, indem Sie den


Belichtungswert einstellen. Befolgen Sie hierzu die

Anweisung aus der Betriebsanleitung des Blitzgerätes.

2. Stellen Sie die Verschlusszeit (2) auf 1/125 Sek.

17

19

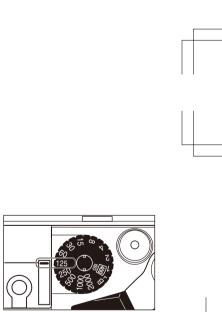

"B" (Langzeitbelichtung) Einstellung 1. Mit der Verschlusszeitwählscheibe (2) auf der "B" Position, bleibt der Verschluss geöffnet, solange der Auslöser (4) gedrückt bleibt.

Belichtungszeit von mehr als einer Sekunde

erforderlich ist, wie zum Beispiel bei einer

2. Diese Einstellung ist nützlich, wenn eine

Landschafsaufnahme bei Nacht.

verwenden. Hinweis: Wir empfehlen, bei dieser Einstellung die Batterien aus der Kamera zu entfernen, um eine Erschöpfung der Batterien zu vermeiden.

3. Stellen Sie sicher, bei diesen langen Verschlusszeiten ein Stativ und / oder einen Drahtauslöser zu

- 18
- Separat lieferbares Zubehör

Filmtransport:

Filmrückspulen:

Filmempfindlichkeits-

Bildzählwerk:

bereich:

M-Bajonett Adapterring



Seitengriff

Typ:

Filmformat:

Verschluss:

Sucher Vergrößerung:

Bildbegrenzung:

Fokussierung:

Blitzanschluss:

Belichtungsanzeige:

Belichtungsbereich:

Belichtungsmesssystem:

Manueller T-Winder



Schlitzverschluss mit B, 1-1/2000-Sek.

x0,52 Bessa-R4M Bessa-R2M:35mm, 50mm, 75mm, 90mm Bessa-R3M:40mm, 50mm, 75mm, 90mm Bessa-R4M:21mm, 25mm, 28mm, 35mm, 50mm Bildentsprechungstyp LED Verschlusszeitanzeige im Sucher Mittelpunktdurchschnittsmessung: durch Drücken des EV1-19(ISO 100, F1.4, 1sec. - F16, 1/2000sec) X-Synchronkontakt, synchronisiert bei 1/125 Sek. oder

Zubehör erhältlich.

rückwärtigen Abdeckung.

21

Durch einen vollen oder mehrere Teilschwenks des

Durch Filmrücklaufknopf und Filmrückspulhebel.

Additiver Typ mit Autoreset bei Öffnung der

Transporthebels; Doppelbelichtungssperre; T-Winder als


ISO 25 - 3200 in 1/3 Schritten. Stromversorgung: Zwei 1,5V Alkalische Batterien (LR44) oder Silberbatterien (SR44) Abmessungen: 135,5(b) x 81(h) x 33.5(t)mm Gewicht: Bessa-R2M, R3M:430g Bessa-R4M:440g Beachten Sie bitte: Diese Daten und das äußere Erscheinungsbild können ohne vorherige Benachrichtigung zu Zwecken der Verbesserung verändert werden.

niedrigeren Geschwindigkeiten.

x0,7 Bessa-R2M

x1,0 Bessa-R3M

Auslösers

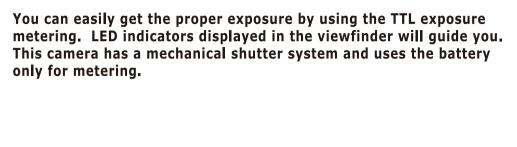

Congratulations on the purchase of your new Bessa rangefinder! This is a compact and lightweight camera with a VM lens mount.

the doubled images of your subject seen at the finder's center

converge into a single image.

(19) Synchro Contact (20) Finder Frame (21) Viewfinder

(22) Tripod Socket

(24) Film Guide Rails (25) Rewind Fork (26) Film Cartridge Chamber

(28) Film Cartridge

(30) Winder Coupler

(33) Film Sprockets

Mounting/Removing Lens

1. To mount the lens, match the red mark on the camera body with

the red mark on the lens barrel, then insert the lens into the

To remove the lens from the camera body, press the Lens

1. Mount M-Bayonet Adapter Ring (sold separately) on the camera

*Any one of three types of M-Bayonet Adapter Ring can be used.

*Refer to the instruction manual for M-Bayonet Adapter Ring to

Align the lens mount screw with that of the M-Bayonet Adapter

28

30

*Pay attention not to over-tighten the lens to the body. To remove the lens from the camera, turn the lens

camera body and turn the lens clockwise until it clicks.

2. Release Button(8) and turn the lens all the way counter

clockwise, then lift it straight out of the mount.

M (Bayonet) Mount lens

mount it on the camera body.

2. Ring, then turn the lens clockwise.

L Mount lens


3. counterclockwise.

Loading Film

(29) Back Door

Quick and accurate focusing is easy. Just turn the focusing ring until

24

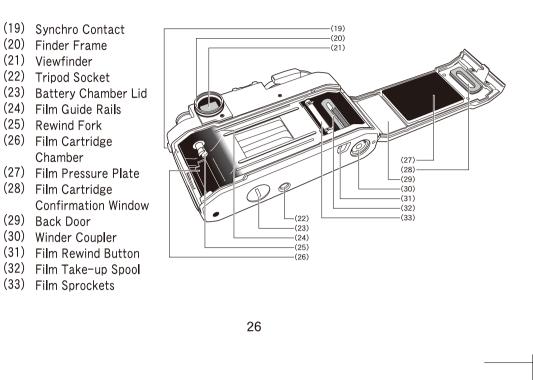

Attaching the neck strap

Description of Parts

(2) Shutter Speed ISO/Film Speed Ring

(16) Bright-line Frame Illumination Window

25

(1) Shutter Speed Index

(3) Film Speed Window

(7) Neck Strap Eyelet

(8) Lens Release Button (9) Accessory Shoe


(10) Frame Selector Lever (11) Film Rewind Crank (12) Film Rewind Knob (13) Film Rewind Crank Tip (14) Backdoor Lock Lever (15) Rangefinder Window

(17) Viewfinder Window (18) VM Lens Mount

(6) Film Counter

(4) Shutter Release Button (5) Film Advance Lever

Attach the neck strap to the camera as illustrated below.

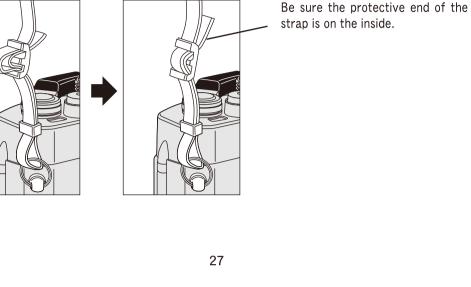


-(10)



Inserting Batteries

coin or screwdriver.

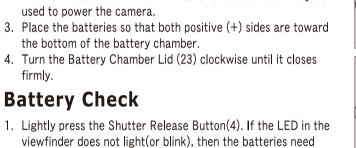

replacing or have been loaded incorrectly.

2. Replace both batteries as necessary.

1. Turn the Battery Chamber Lid (23) counter clockwise using a

2. Two LR44 alkaline or two SR44 silver oxide batteries may be

Caution: Keep batteries away from infants and small children. In case a battery is accidentally swallowed, call a doctor immediately. 29

Until winding the Film Advance Lever, the exposure-metering

5. Check that the film perforations are properly engaged by

(24) while turning the Film Advance Lever (5) lightly in

order to advance the film. Do not touch the shutter

6. Gently close the Back Door and push it until it clicks and

7. Remove the slack by turning the Film Rewind Crank (11)

Advance the film a few frames and operating the Film

and then return the crank to its original position.

gently in the direction of the arrow until the loaded film is

properly tensioned. Stop turning the crank when it is tight,

and that the film slides smoothly along the Film Guide Rails

the teeth of the Film Sprockets (33)

curtain.

locks shut.



Film Speed Setting

the Film Speed Window (3).

shown in the viewfinder.

used is ISO 100/21):

Selecting Framelines

☐ 90mm

R₃M

Rotate the Film Rewind Crank carefully while pushing down lightly on the Film Rewind Knob until the film locks on the 3. Film Rewind Fork (25). Insert the film leader into the grooves of the Film Take-up Spool (32) and place it so that the sprockets engage the 4. film edge perforations.

1. To open the Back Door (29), unfold and lift the Film

Counter (6) will automatically reset to "S."

Rewind Crank(11) up, then pull the Film Rewind Knob(12)


release position. When the Back Door is opened, the Film

Insert the film cartridge into the Film Cartridge Chamber

the bottom. Do this in a place away from direct sunlight.


up while holding the Backdoor Lock Lever(14) in the

2. (26) so that the protruding end of the film cartridge is on

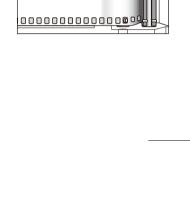

0000000000

8. Advance Lever until the Film Counter (6) indicates "1". Make sure that the Film Rewind Knob rotates slightly each time the film is advanced, which will tell you that the film is advancing properly. 31

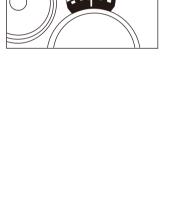

over exposure by 2EV over exposure by 1.5 EV over exposure by 1 EV over exposure by 0.5 EV

Correct exposure under exposure by 0.5EV

under exposure by 1 EV

under exposure by 1.5 EV under exposure by 2 EV

under exposure by over 2 EV

+2 blinks O blinks · +2 lights O blinks ·

+1.5 lights O blinks ···

+0.5 lights O blinks ·

-0.5 lights O blinks -1 lights O blinks ···

-1.5 lights O blinks -2 lights O blinks -2 lights O blinks

Caution: Make sure to set the film speed exactly at the detent, not in between, othewise proper shutter speed will not be


1. Film speed (ASA/ISO) is indicated on the outside of the

2. To set the Film speed: lift the Film Speed Ring (2) and turn

it until the arrow indicator on the inner ring points to the

corresponding Film speed value which can be seen through

film package or in the film instructions.



2. With brighter light, fast moving subjects, or when using fast film, it is recommended to use higher shutter speeds to adjust to correct exposure value.

100/21 film are as below.

Focusing 1

converges to one.

Focusing 2

Exposure Metering

Exposure Setting

correct exposure, or under exposure:

How the viewfinder LED shows over-exposure,


(Shutter Speed Priority)

1. Turn the Shutter Speed Ring (2) so that the

indicator line aligns with the desired shutter

speed value. Be sure that the dial clicks into

33

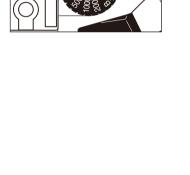

turn the aperture ring to a smaller f/value to adjust to correct exposure value. 5. Gently push down Shutter Release Button. Note: Outside the exposure metering range of your camera (EV1 to EV19), the Exposure meter will not function properly.

34

Turn the Frame Selector Lever (10) and the frame illustrated below will be shown in the

Additionally, parallax is automatically corrected according to the shooting distance.

Select the frame pattern according to the focal length of the lens you have mounted on the

36

finder. Each frame shows the field of view for the lens indicated.

4. To check exposure, lightly press the Shutter Release Button (4) and turn the aperture ring until the LED indicates exposure is correct. When LED indicates over exposure, turn

the aperture ring in the direction of greater f/value. If LED indicates under exposure,

32

3. Here is a list of situations and their recommended shutter speeds (assuming the film being

1-1/15 1/30-1/60

1/125-1/250

1/500-1/2000

1/500-1/2000

Stationary subject in subdued light Indoors in normal conditions

Outdoors on a fine day

Seaside in midsumm

Fast moving subjects

turn the shutter speed dial to the lower shutter speed setting. Note: Outside the exposure metering range of your camera (EV1 to EV19), the exposure meter will not function properly.

Exposure Setting (Aperture Priority)

1. Turn the aperture ring until the index on the lens barrel indicates the desired f/value. 2. The suitable aperture value changes according to the brightness of the subject, the depth-of-

> Indoors in normal conditions Outdoors on a cloudy day Outdoors on a fine day Seaside in midsummer

Mountain area with snov

speed, make sure that it clicks positively on a speed position, not in between.

field desired, or the film speed of the film in use. Typical settings of the aperture with ISO

3. Click points are provided each speed setting on the Film Speed Ring. When setting the film


4. To check exposure, lightly press the Shutter Release Button (4) and turn the Shutter speed dial until the LED lights in the finder align. When you have a situation of overexposure, then turn

the shutter speed dial to the higher shutter speed and if a situation of under exposure, then

F2 - F4 F4 - F8

F8 - F11 F11 - up F11 - up

35

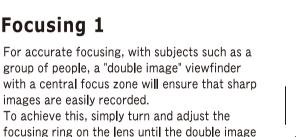


* When focusing, make sure to put your eye in the middle of the Viewfinder. 37

For accurate focusing of architectural or technical subjects with vertical lines, use the

lens so that the lines join together.

"Split image" focusing option. To achieve this, simply turn and adjust the focusing ring on the

Rewinding the Film 1. When the roll of film ends, the advance lever will no longer advance.

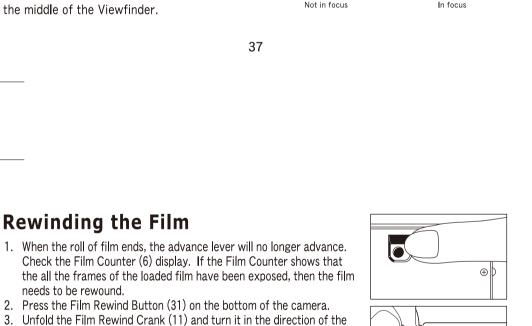

"B" (Bulb) setting

(4) is pressed.

holding the camera.

Holding Camera

rings of the lens.

38

1. With the Film Speed Ring (2) set at "B" position, the shutter

Note: We recommend that you remove the batteries to avoid wasting energy when you use the "B" setting.

long shutter times to avoid camera shake.

will remain open for as long as the Shutter Release Button

1. Hold the camera in the palm of your right hand. This will

2. Hold the camera body steadily and place your right index

3. Press your right elbow lightly against your body and then

look through the rangefinder eyepiece to steady the

camera against your face. Then relax your right arm

finger lightly on the shutter release button.

allow you to use your left hand to support the underside of the camera and also allow it to turn the aperture and focus



(14) in order to open the Back Door and take out the film. 6. Remove the film cartridge in a place away from direct sunlight.

Flash Photography

1. Simply fit the flash unit into the Accessory Shoe (9).

2. Set the Film Speed Ring (2) at 1/125 sec. or slower.

41

cartridge and is ready to be removed.

needs to be rewound.

Note: If the film reaches the end of the roll during a film advance stroke, then the film advance lever will lock. Rewind the entire roll, then complete the stroke of the film advance lever after removing the

arrow. In case if the Film Rewind Crank Tip (15) stops in between Film

Rewind Knob (14) and camera body (fig.1), after press the film

Rewind Button (34) turn the Film Rewind Knob (14) till the Film

Rewind Crank Tip (15) will be in the free space to unfold (fig.2)

4. When the winding tension eases, the film is completely wound into the

5. Pull up the Film Rewind Knob (12) and pull the Backdoor Lock Lever



3. Set the corresponding aperture value form the Guide 2. This setting is useful when an exposure longer than one Number of your flash unit by operating the aperture ring second is required, such as in night photography. and follow the instruction given in the manual of your flash 3. Be sure to use a tripod and/or cable release when using

40

Optional Accessories

lets you pull a trigger with your left hands that allows a rapid series of exposures. Side Grip This improves your right hand's grip on the camera. Also

This accessory screws into the bottom of the camera and

M bayonet adapter ring This M bayonet adapter ring is necessary to use L mount lenses on your Bessa camera. (Can also be used on other M bayonet cameras).



Type:

Film Format:

Lens Mount:

Framelines:

Focusing:


Finder magnification:

Shutter:

Trigger Winder

adds weight to stabilize shooting.

Specifications

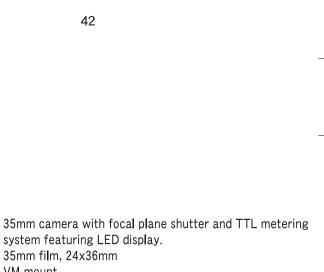

detach it.

Diopter Lens

prescription.

43

Diopter lenses in 6 types (-3, -2, -1, +1, -2, +3) are available

● Turn the rubberized Finder Frame (20) counter clockwise to

Screw the selected Diopter Correction Lens in clockwise.

as optional accessories to compensate for your eyeglass

Attaching a diopter lens

Note: Ask your dealer for details.



Vertically moving mechanical metal focal plane shutter B, 1-1/2000 sec x0.7 Bessa-R2M x1.0 Bessa-R3M x0.52 Bessa-R4M

VM mount

35mm, 50mm, 75mm, 90mm (Bessa-R2M)

40mm, 50mm, 75mm, 90mm (Bessa-R3M)

Coincidence type. Infinity -0.7m

44

21mm, 25mm, 28mm, 35mm, 50mm (Bessa-R4M)

Exposure display: Exposure Metering System: Exposure Coupling Range: Flash Terminal: Film Advance:

Film Rewind: Film Counter: Film Speed Range: Power Source: Dimensions: Weight:

batteries(SR44) Bessa-R4M:440g

By LED indicator in viewfinder.

Center-weighted average metering.

EV1-19(ISO 100, F1.4, 1sec. - F16, 1/2000sec)

X synchronic contact synchronized at 1/125sec or slower

By single and/or multiple ratcheting lever action. Double

exposure lock system. 120-degree throw and 45-degree (Trigger winder available as optional extra.) By film rewind button and rewind crank. Additive type with auto reset by opening the backdoor. ISO 25 - 3200 by 1/3 steps. Two 1.5V Alkaline batteries(LR44) or Silver oxide 135.5(W) x 81(H) x 33.5(D)mm Bessa-R2M, R3M:430g Note: These specifications and external appearance are subject to change without prior notice.